


# Instructions for use **ALTEE**

**L'ECHELLE**  
EUROPEENNE

Conformity to the standard EN 131-7

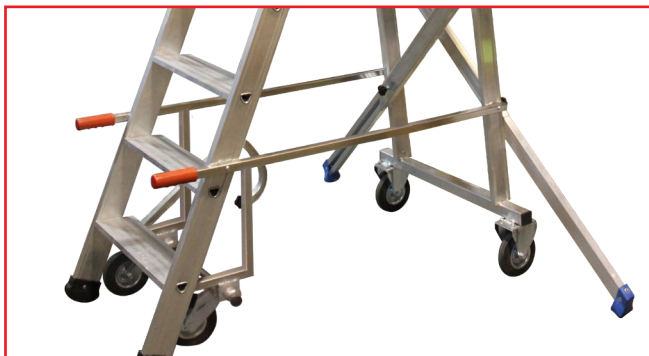

Visual with rolling arm option

## Use of the product


### 1. Setting up




Ground platform




Rest the platform on the ascent plane

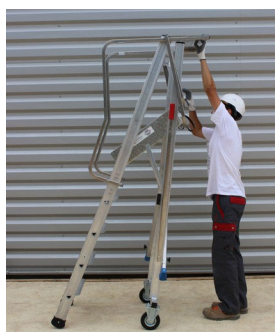

Pull the bracket plane down by lowering the floor

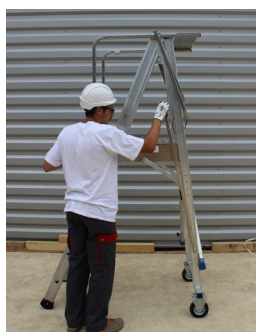

Installation of the handles  
(2 hexagon socket screws at the ends of each handle, 4 in total + an Allen key)

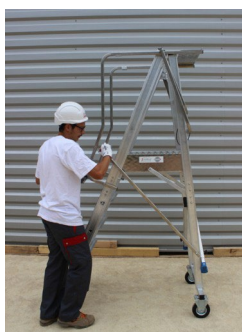

Installing the stabilizers


# Instructions for use

## ALTEE


L'ECHELLE  
EUROPEENNE

Conformity to the standard EN 131-7

### 2. Access

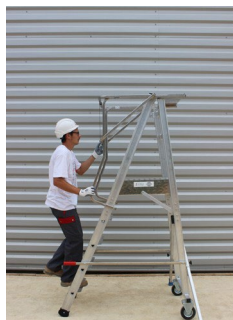

Place hands on the handrails

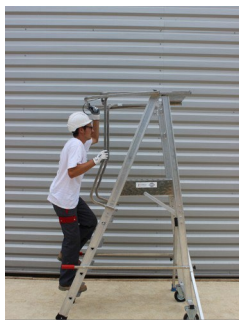


Raise the guardrail so that you can get under it




Move forward on the floor by folding down the guardrail behind you




### 3. Closing

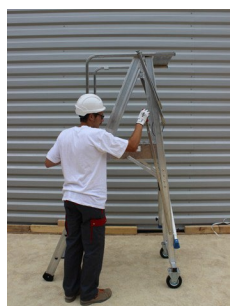

Fold the guardrail over the front of the platform, unscrew into the end of each handle (side of the ascent plane) with an Allen key and place them vertically

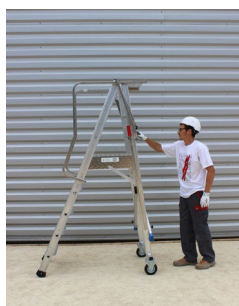


Hold the guardrail

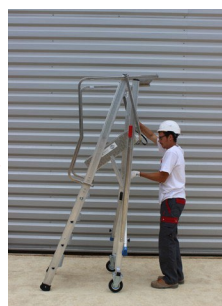

Lift the platform, push the bracket lane leaning on the ascent plane

### 4. Moving

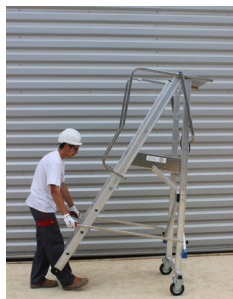

Move open platform by holding onto the handles



Move closed

## Normal conditions of use

- Check that the 4 legs and the 2 stabilizers are touching the ground.
- The support surface of the platform must be non-slip.
- Do not use the platform if you are in a state of fatigue (heat, shortness of breath, injury, etc...)
- Do not use without the stabilizers in place (except for versions 3 and 4).
- Make sure the platform is not near a live electrical source.
- Do not climb onto the guardrails.
- Do not use the platform behind a door that is not locked.
- Two people cannot climb onto the platform; it is designed for one person only.
- Ascending and descending is always done facing the platform.
- Place the guardrails behind you once you are on the platform.

## Maintenance, inspection

- Inspect the product before each use (condition of the wheels, guardrails, connection of the steps, etc.).
- In case of broken or defective parts, replace them with parts coming exclusively from the manufacturer L'Echelle Européenne (see after-sales service form).
- After each use, clean the platform.
- It is recommended to check the platform periodically and to record the results of these checks in a register (see manufacturer's check sheet).